

Controls/Handsets



Contents

Preface	4
Safety instructions	5
Repairs	6
Manufacturer's declaration	6
Misc. on the DESKLINE® system	7
Warranty	7
Maintenance	7
Mounting guidelines for DPA/DPB	8
Operation of the DP1	9
Operation of the DP1C	10
Operation of the DPF	12
Operation of the DPF1C	13
Mounting of all DPF versions	15
Operation of the DPT	17
Mounting of the DP1T	19
Operation of the WDPL	20
Disposal of LINAK's products	25
Labels	26
Drawing appendix	27
Addresses	32

Preface

We are delighted that you have chosen a product from LINAK A/S. LINAK systems are high-tech products based on many years of experience in the manufacture and development of actuators, electronic control boxes, controls, and chargers. We are also constantly improving our products to meet customer requirements.

This User Manual will tell you how to install, use and maintain your LINAK DESKLINE® products.

We are sure that the DESKLINE products will give you many years of problem-free operation. Before our products leave the factory they undergo full function and quality testing. Should you nevertheless experience problems with your systems, you are always welcome to contact our service departments or service centres.

LINAK subsidiaries and distributors all over the world have authorised service centres, which are always ready to help you.

LINAK provides a warranty on all its products. This warranty, however, is subject to correct use in accordance with the specifications, maintenance being done correctly and any repairs being carried out at a service centre, which is authorised to repair LINAK products.

Changes in installation and use of LINAK systems can affect their operation and durability. Changes must therefore only be made by agreement with LINAK A/S and are made at your own risk.

LINAK A/S

Safety instructions



Safe use of the system is possible only when the operating instructions are read completely and the instructions contained are strictly observed.

Failure to comply with instructions marked with the "NOTE" symbol may result in serious damage to the system or one of its components.

Persons who do not have the necessary experience or knowledge of the product/products must not use the product/products. Besides, persons with reduced physical or mental abilities must not use the product/products, unless they are under surveillance or they have been thoroughly instructed in the use of the apparatus by a person who is responsible for the safety of these persons.

Moreover, children must be under surveillance to ensure that they do not play with the product.



It is important for everyone who is to connect, install, or use the systems to have the necessary information and access to this User Manual.



If there is visible damage to the product it must not be installed.



The appliance is not intended for use by young children or infirm persons without supervision.



Young children should be supervised to ensure that they do not play with the appliance.

Repairs

In order to avoid the risk of malfunction, all DESKLINE® repairs must only be carried out by authorised LINAK workshops or repairers, as special tools must be used and special gaskets must be fitted. Lifting units under warranty must also be returned to authorised LINAK workshops.



Warning!

If any of the DESKLINE® products are opened, there will be a risk of subsequent malfunction.



Warning!

The DESKLINE® systems are not resistant to cutting oil.



DECLARATION OF INCORPORATION OF PARTLY COMPLETED MACHINERY

LINAK A/S
Smedevænget 8
DK - 6430 Nordborg

Name and address of the person authorized to compile the relevant technical documentation:
John Kling, Group Headquarters, Guderup, DK-6430 Nordborg, email jkl@linak.com

Herewith declares that LINAK Actuators and Actuator Systems comply with the following parts of the Machinery Directive 2006/42/EC, ANNEX I, *Essential health and safety requirements relating to the design and construction of machinery*:

1.5.1 Electricity supply: *Directive 2006/95/EC on the harmonization of the laws of Member States relating to electrical equipment designed for use within certain voltage limits.*

1.5.10 Radiation, 1.5.11 External radiation: *Directive 2004/108/EC on the approximation of the laws of the Member States relating to electromagnetic compatibility.*

The relevant technical documentation is compiled in accordance with part B of Annex VII and that this documentation or part hereof will be transmitted by post or electronically to a reasoned request by the national authorities.

This partly completed machinery must not be put into service until the final machinery into which it is to be incorporated has been declared in conformity with the provisions of this Directive, where appropriate.

Date: 2010-01-01

Signature:

John Kling
Certification and Regulatory Affairs

Misc. on the DESKLINE® system

Warranty

There is a 36 months' warranty on the DESKLINE products Controls / Hand controls against manufacturing faults from the production date of the individual products (see label). LINA K A/S' warranty is only valid in so far as the equipment has been used and maintained correctly and has not been tampered with. Furthermore, the system must not be exposed to violent treatment. In the event of this, the warranty will be ineffective/invalid. For further details, please see LINA K A/S' ordinary conditions of sale.

Maintenance

Clean dust and dirt on the outside of the system at appropriate intervals and inspect for damage and breaks.

Inspect the connections, cables, and plugs and check for correct functioning as well as fixing points.

 


The cleaners and disinfectants must not be highly alkaline or acidic (pH value 6-8).



The mounting screws on the DP, DPA, or DPB must be fastened with a max. torque of 1 Nm.

Mounting guidelines for DPA/DPB

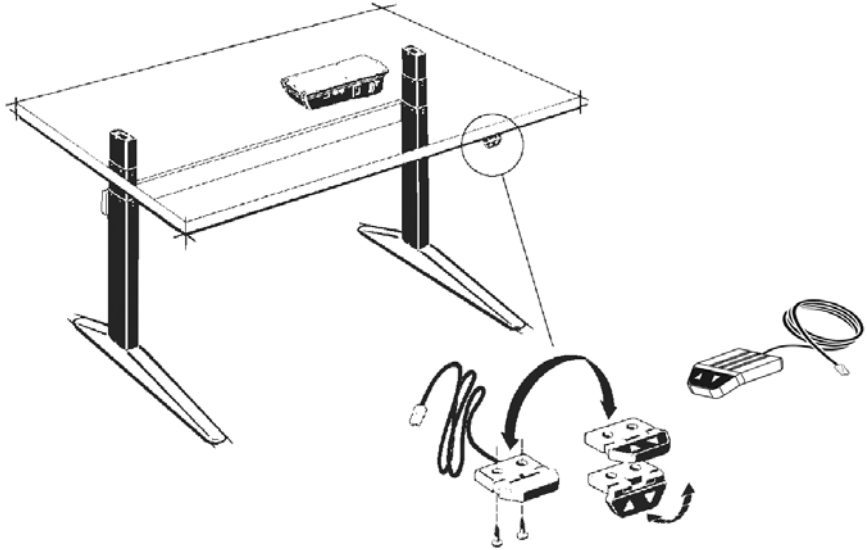

The DPA/DPB can be mounted on the desktop so that the keys are either facing upwards or outwards. Alternatively the DPA can be mounted flat under the desktop with the keys facing downwards.

Operation of the DPA/DPB in connection with DESKLINE® systems (not CBD2N)

The Desk Panel is used to operate the DESKLINE system. The two arrow buttons are used for parallel drive.

Parallel drive ($\Delta \nabla$)



 

 
 
 
The arrow buttons start parallel drive. The function is only activated when holding the button down.



The mounting screws on the DP, DPA, or DPB must be fastened with a max. torque of 1 Nm.

Operation of the DP1

 

 

The Desk Panel is used to operate the DESKLINE® system. The DP is available in a number of versions DP1K/DP1L/DP1U/DP1V/DPF1C/DPF1K for single/parallel drive without memory and DP1U/DPF1M for single/parallel drive with memory (3 memory positions). The two arrow buttons are used for single/ parallel drive and the last four buttons for memory drive.

- | | | |
|--|--------------|-------------|
|  | Desk up | } Only DP1N |
|  | Desk down | |
|  | Store memory | |
|  | User memory | |
|  | Memory 1 | |
|  | Memory 2 | |
|  | Memory 3 | |

Single/parallel drive


 
 
The arrow buttons start the DL4/DB4. The function is only activated when holding down the button.

Store memory

 

 
- Push 
- Within two sec. push either , , or 

Choice of user (only DP1N)

Two persons can store 2 memory positions each. Select user 1 or user 2.

- Push 
- Within two sec. push either  or 

Store memory

 
 
 
 
 
 
 
- Push 
- Within two sec. push either  or 

Memory drive

Memory 1, 2, and 3 start a memory drive, the channel(s) drive to a preprogrammed position.



The mounting screws on the DP, DPA, or DPB must be fastened with a max. torque of 1 Nm.

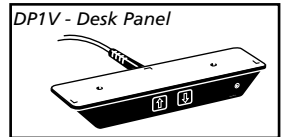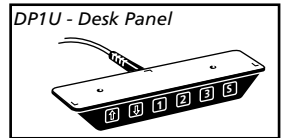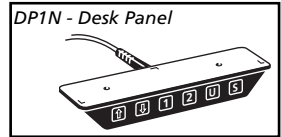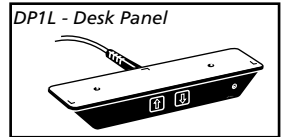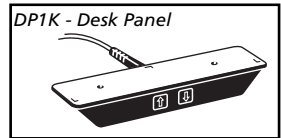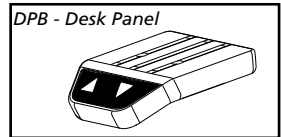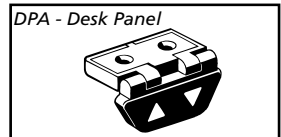







Operation of the DP1C

The DP1C cannot be used on the CBD4 with mains cut-off.

Description

   The DP1C is equipped with display and memory and is compatible with CBD4 (Advanced, software 077402 ver. 1.66 or later). The DP1 is only available as a 1-channel version for operation of the parallel channels up and down. The actual height of the desk is shown in the display. The display is of the LED type with a yellow light and 10 mm high digits.

-  Desk up
-  Desk down
-  Store memory
-  Memory 1
-  Memory 2
-  Memory 3



Normal operation:

To run the desk up or down, press the UP or DOWN button, and keep it pressed until the desk reaches the desired height. The display will count up or down while running, and after stop it will continually show the current height of the desk.

Changing between cm and inches:

Keep the S button pressed for approx. 4 sec. and the reading will change from the current setting. The default setting depends on the type chosen.

Store a memory position:

When pressing the "store" button, the display will flash "S" for 3 sec. Within the 3 sec. press memory button 1, 2 or 3. The display will acknowledge by showing S1, S2 or S3 for 1 sec. To abort a store sequence, press the UP or DOWN button while the "S" is flashing, or wait the 3 sec. until the display automatically returns to show the height of the desk.

Drive to a stored position:

Version with "GO-memory"

Press memory button 1, 2, or 3. The display will flash "GO1", "GO2" or "GO3" for 3 sec. Within the 3 sec. press the UP or DOWN button and keep it pressed until the desk stops in the stored position. Both the Up and the Down button will activate memory drive. Although e.g. the memory position is higher than the actual height, it will drive upwards when you press the Down button. While running to a memory position the display will show GO1, GO2 or GO3, and when it stops in the stored position, the height of the desk will be shown. Releasing the UP or DOWN button will abort the memory drive. The display will show the height of the desk.

Version with "standard memory"

Press memory button 1, 2, or 3 and the system will start driving to the wanted memory position. Keep the button pressed until the position is reached. The display will show the actual height during the memory run.

Adjust the display to show the correct height:

It may be necessary to adjust the display due to different thicknesses of desktops etc, when the DP is delivered from the factory. The DP will show 68 cm or 24.5 inches (default setting) height of the desk. At the same time press the "Store" button and step UP or DOWN, until the display shows the correct height.

Adjusting the light intensity of the LED display

Possible light settings are: 0= off, 25 = 25%, 50 = 50%, 75 = 75%, 100 = 100%.

Adjustment procedure

Press the "1" button and at the same time either "desk up" or "desk down" this will adjust the light intensity. Initial press will show the current setting. Keep the "1" button pressed during the whole sequence while adjusting up or down. Keep a button pressed for more than 800 msec then the button will auto repeat every 100 msec. Releasing all buttons stores the new setting.

Adjusting the light timeout

Possible light timeouts are: 0-15 sec and off

Adjustment procedure

Press the "3" button and at the same time either "desk up" or "desk down" - this will adjust the light timeout. Initial press will show the current setting. Keep the "3" button pressed during the whole sequence while adjusting up or down. Keep a button pressed for more than 800 msec, then the button will auto repeat every 100 msec. Releasing all buttons stores the new setting.

Errors

Below please find the possible errors that can be displayed. The errors will only be displayed when a button is pressed. The display blinks while showing the error. E16 overrules any other error as the detection is registered only in the display and no message is sent to the control box.

Diagnostic errors

The CBD4 (version 1.86 or later) can send up to 6 different diagnostic error codes at the same time. The diagnostic error codes will overrule error states (except E16). Diagnostic errors will only appear as long as the button is pressed. The display will blink EXX and will toggle through the diagnostic errors and send them to the LINBUS in the CBD. For detailed error description and codes, please see the appropriate CBD software description.


(Only working with DP1C from production date 1 february 2006 and onwards)

Error no.	Description
E01	The desk has an unknown position and needs to be initialised.
E02	Overload upwards has occurred.
E03	Overload downwards has occurred.
E16	Illegal keys pressed.

Operation of the DPF

K-version:

 Just activate either the up or down button for parallel drive and the system will drive until the button is released again or the system reaches end position.

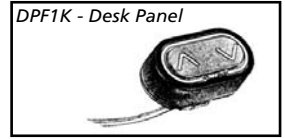

M-version:

 
The DPF is divided into parallel and memory drive. The two arrow buttons are used for parallel drive and the last four buttons for memory drive/storing memory.



- ∧ = Parallel up
- ∨ = Parallel down

S = Store memory

- = Memory 1
- = Memory 2
- = Memory 3

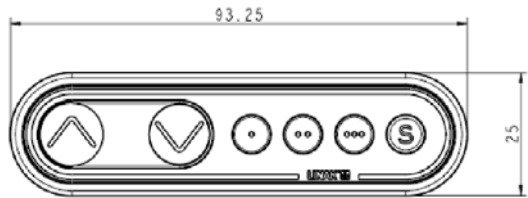

Parallel drive (∧∨)

The arrow buttons start parallel drive. The function is only activated when holding the button down.

Store memory

- Press S – button
- Within two seconds press one of the small buttons with dots and the position will be stored at this button.

Memory drive (small buttons with dots)

Press one of the memory buttons and the system will start driving to the pre-programmed memory position. Keep the button pressed until the position is reached.

 
Operation of the DPF1C



- Λ = Parallel up
- ∇ = Parallel down

S = Store memory

- = Memory 1
- = Memory 2
- = Memory 3

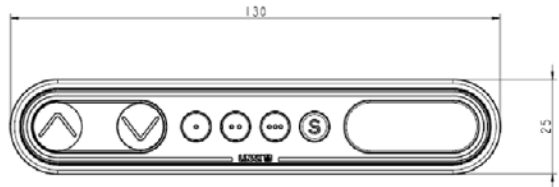

Up and down (Λ∇):

Just activate either the up or down button for parallel drive and the system will drive until the button is released again or the system reaches end position.

Memory:

The four small buttons are used for memory drive/storing memory.

Store memory

- Press S – button, the display will flash for 2 seconds
- Within these two seconds press one of the small buttons with dots and the position will be stored at this button.
- The panel will acknowledge by showing “1”, “2” or “3” in the display depending on chosen position

Memory drive (small buttons with dots)

Press one of the memory buttons and the system will start driving to the pre-programmed memory position. Keep the button pressed until the position is reached.

Display function

Shows the actual height in either cm or inch.

Other functions:

Adjusting initial height

It may be necessary to adjust the displayed height due to different thicknesses of desktops etc. The DPF1C will as standard either show 68 cm or 24.5 inch as the default desk height.

Procedure:

Press Λ and V keys at the same time and keep them pressed for 5 seconds. This allows the initial height to be adjusted. Until the initial height can be adjusted, the display will show three minuses (---) hereafter the display will revert to showing the height. The height can then be adjusted by either Λ or V until til desired height has been reached. The system will return to normal operation (and give a short blink) after 5 seconds of inactivity on the keys.

The feature can be disabled via configuration in which case pressing the Λ and V keys at the same time will be considered an illegal keypress.

Switch between cm and inch.

Switching between cm and inch can only be done via the DPF1C configurator.

Adjusting the light intensity of the LED display

Possible settings are Off, 6%, 12%, 19%, 25%, 37%, 50%, 75% and 100%. The adjustment can only be done via the DPF1C configurator.

Adjusting the light timeout

Possible settings are 0-15 seconds and Off. The adjustment can only be done via the DPF1C configurator.

Error codes

Below please find the possible error codes, which can be displayed. The error codes will only be displayed when a button is pressed. The display will blink while showing the error code. The E16 error will overrule any other errors as the detection is registered only in the display and no message is send to the control box.


Error code	Description
E01	The desk has a unknown position and needs to be initialised.
E02	Overload in upwards direction has occurred.
E03	Overload in downwards direction has occurred.
E16	Illegal keys are pressed

Mounting of all DPF versions

The DPF must be mounted via a mounting bracket. The mounting bracket comes in 4 different versions depending on how the panel should be mounted. Below are some examples on ways to mount:


Example 1: (Article number 914759)

 The panel is mounted with a 90° bracket and placed close to the tabletop

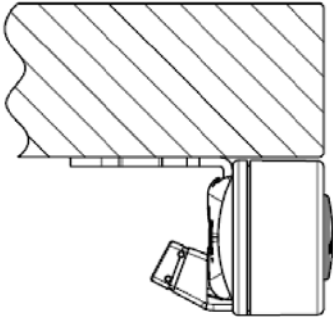


Example 2: (Article number: 914757)

 The panel is mounted with a 90° bracket and placed with a distance to the tabletop

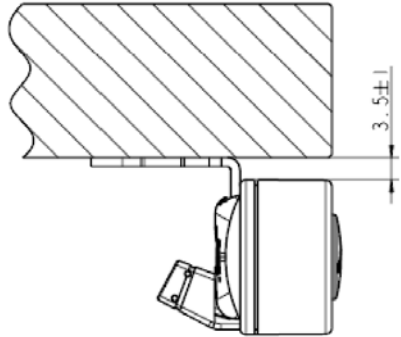


Example 3: (Article number 914760)

 The panel is mounted with a 45° bracket and placed at the edge of the tabletop

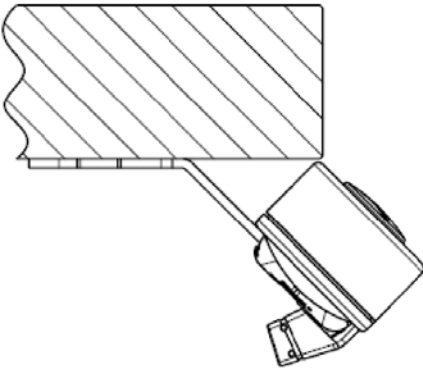

Example 4: (Article number 914785)

 The panel is mounted with a 45° bracket and placed on a tabletop with angled front

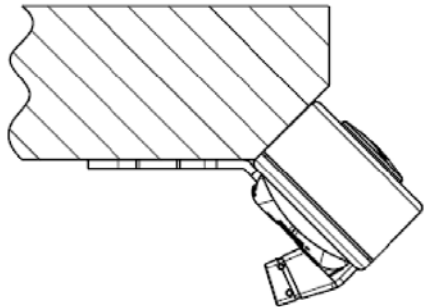


To mount the panel:


Just click the panel into the bracket and it is fixed.

Drawings of the mounting brackets:

 
Article number 914759

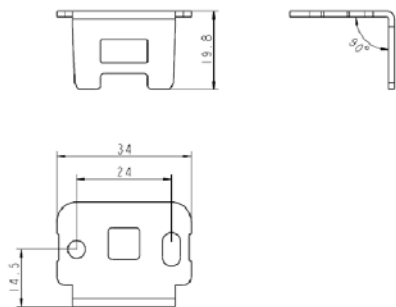


Article number 914757

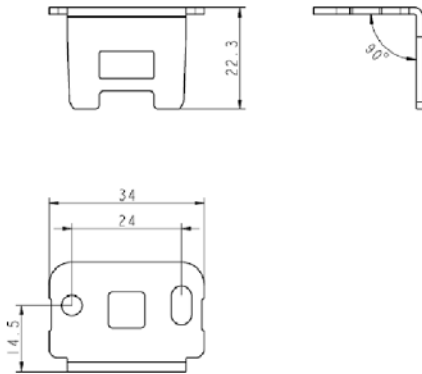 

Article number 914760

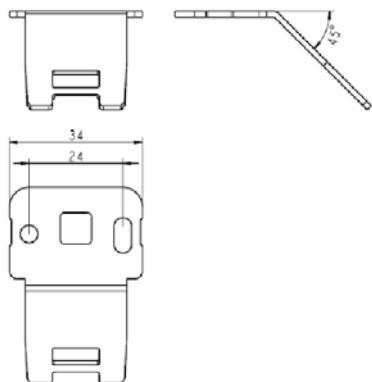 

Article number 914785

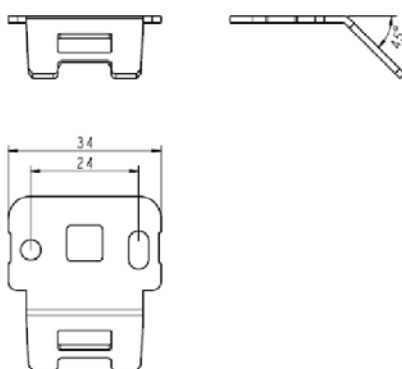 







Operation of the DPT



For safety reasons the DPT has a locking function.

If the DPT is locked, only a bar is lightning in the display. To unlock the control press "S" for 1 sec. When the DPT is unlocked, the height will be shown in the display. Now the DPT is active for 2.5 seconds. When pressing one of the keys you can do your adjustment. Hereafter the DPT will be active for 5 seconds but when there are no activations made within the mentioned time slot, the DPT will go in to locking mode again. Also, if you press "S" for unlocking too long, the DPT will unlock but immediately lock again.

   The Touch Desk Panel is used to operate the DESKLINE® systems. The DPT is divided into parallel and memory drive. The two arrow buttons are used for parallel drive and the last four buttons for memory drive.

-  Desk up
-  Desk down
-  Store memory
-  Memory 1
-  Memory 2
-  Memory 3



Normal operation:

To run the desk up or down, press the \wedge or \vee button, and keep it pressed until the desk reaches the desired height. The display will count the height as the table is moving and will continually show the height of the desk after stopping.

Storing a memory position:

Touch the "S" button and the display will flash "S" for 3 sec. While the "S" is displayed, touch the memory button 1, 2 or 3. The display will acknowledge by showing S1, S2 or S3 for 1 sec.

To abort a store sequence press the \wedge or \vee button while the "S" is flashing, or wait the 3 seconds until the display automatically returns to show the height of the desk.

Drive to a stored position:

Press memory button 1, 2 or 3 and the system will start driving to the desired memory position. Keep the button activated until the position is reached. The display will count the height as it is driving to the memory position.

Customising the DPT digital display

Adjust the display to show the correct height:

The DPT will show 68 cm or 24.5 inches as the height of the desk as the default setting. It may be necessary to adjust the displayed height due to different thicknesses of desktops etc. when the DPT is delivered from the factory. To adjust the display touch the "S" button and the \wedge or \vee button at the same time until the display shows the actual height of the desk.

Changing between cm and inches:

Touch the "S" button for approximately 4 seconds and the unit of measurement will change on the display. The default setting depends on the type chosen.

Error Codes

The DPT has capability of displaying error codes for diagnostic feedback. Below are possible feedback errors, which can be displayed by the DPT. The error codes will only be displayed when a button is touched in unlocked mode. The display will blink while showing the error. E16 overrules any other error since the detection is registered only in the display and no message is sent to the control box. For detailed error description and codes, please see the appropriate CBD software description.

Error no.	Description
E01	The desk has an unknown position and needs to be initialised.
E02	Overload in upwards direction has occurred.
E03	Overload in downwards direction has occurred.
E16	Illegal keys are pressed.

Mounting of the DP1T:

 
The hole in the tabletop has to be made according to the drawing. The DPT is mounted in the hole and the two screws on the backside are fastened with a maximum torque of 40 Ncm. If you do not have a torque screw driver, please tighten gently and not more until you can feel a slight resistance. Do not use electrical tool!

Please note:




1. Mounting the DPT into the tabletop should be done at the end-user, so the product will not be exposed to any stress, which can destroy the product when transported.
2. For countersink versions the technician must ensure that the acrylic plate is not put under pressure, which will push the acrylic plate out of place.
3. The screws which are delivered with the product must be used. If they have gone lost there should not be chosen new screws which are longer than 12 mm, otherwise top and bottom will disconnect.
4. If the product has visible damages it should not be mounted.
5. The product is IP30; the customers can be sure that fluids / dust will not enter the product. The front itself is closed by the acrylic plate's adhesive foil.
6. Cable release is specified for max. 5 kg
7. Remember to remove the protection foil.

Frame:

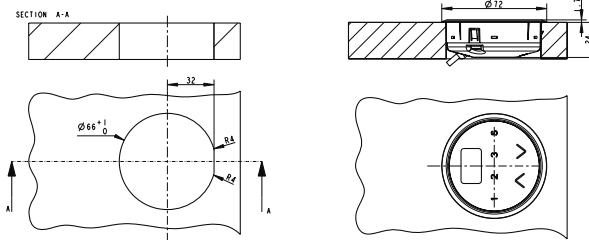

Countersink:

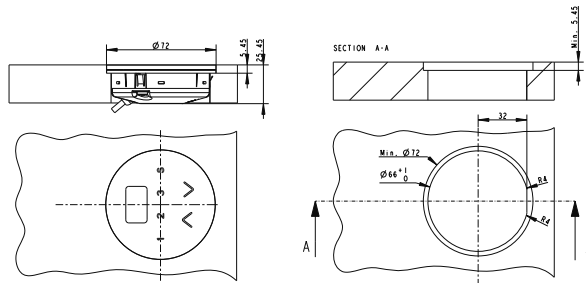 

Operation of the WDPL

The batteries:

Wired WDPL: Install 3 x 1.5 V batteries type AA. The batteries are used as a backup of the clock function if the CBD is disconnected from the mains.

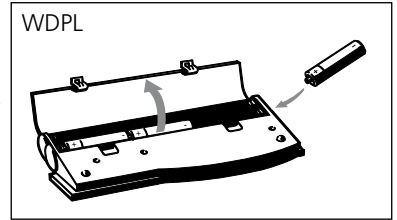 


Figure 9

When the batteries are mounted, the display will show the clock function in hh: mm. The clock has to be adjusted. **See adjusting the clock on page 22.**

Low battery:

Change batteries at weak contrast in the display or when the display shows strange symbols/misinformation.

This does not influence the function of the WDPL - it is exclusively a sign that the batteries are to be replaced.

The WDPL will also work without batteries because it will be powered by the control box.

The WDPL will also work on a CBD4/CBD5 with mains cut-off. The clock will only be shown if you have battery backup.

The cable from the WDPL is connected to the control box under your table:

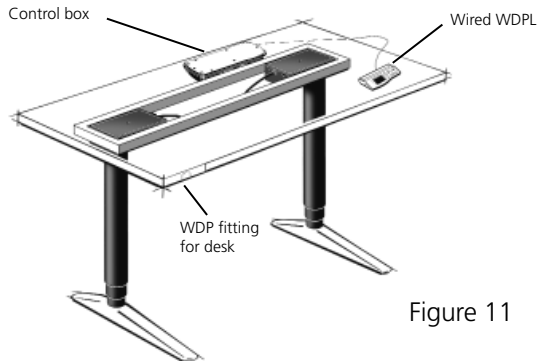 
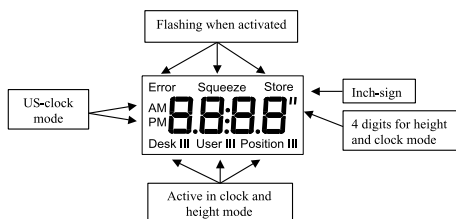 




















Figure 11

Display layout - WDPL:



Calibrating the WDPL

For the WDPL to function correctly you have to calibrate your system. This has to be done before using the WDPL. You only have to do this once.













Action:	Display view:
<p>1. Switch between [cm] and [inch]. Press and hold  and then press .</p>	 
<p>2. Measure the height from desk to floor. If only one desk is connected, - go to point 4.</p>	
<p>3. Press  and then press  or  to select desk. If only one desk is connected it is not possible to select Desk II or III.</p>	
<p>4. Press and hold  and then press  or  to adjust the height in the display. Example: The display will switch from e.g. 68 to 69, 70, 71 etc. when  is pressed and held and then  is pressed. and e.g. 68 to 67, 66 etc. when  is pressed and held and then  is pressed.</p>	
<p>5. When the wanted height is shown in the display, press and hold  and then . The reference height of the desk will now be stored in the control box. When the reference height is stored, the digits will be switched off for 1 sec. and back on again.</p>	

If the buttons are not activated for 15 sec., the clock function will appear in the display.

It is not necessary to repeat the calibration when changing batteries.

Adjusting the clock

      Example:

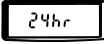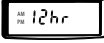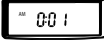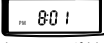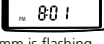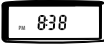Action:	Display view:
<p>1. Press the "clock button" using a ball pen. 24hr mode (European time mode) is default - can be changed to 12hr mode (US time mode)</p> <p>Changing time mode:</p> <p>Press  or </p> <p>(Press the "clock button" again to confirm "time mode" using a ball pen)</p> <p>2. Press  or  to adjust "hh"</p> <p>3. Press the "clock button" again to confirm "hh".</p> <p>4. Press  or  to adjust "mm"</p> <p>5. Press the clock button again to confirm "mm"</p>	 <p>Flashing</p>  <p>Flashing</p>  <p>hh is flashing</p>  <p>Switches to PM if hh > 11</p>  <p>mm is flashing</p> 

The clock is now activated.

Troubleshooting (WDPL):

If errors occur the error code appears in the display - The "error" segment flashes (1 Hz).

Error code	Description of the error	Troubleshooting
E-01	Position lost	Initialise
E-02	Overload in upward direction	Remove heavy objects from the desk
E-03	Overload in downward direction	Remove objects that prevent downwards operation
E-16	Illegal push on key	Release all buttons and activate valid button / button combination














 
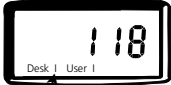 
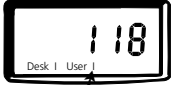 

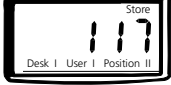 
Store a memory position

3 users can store 3 memory positions each. The connected desks (max. 3) are to be adjusted individually - one at a time.

Quick setup:

On the back of the WDP you will find a quick guide for storing a memory position.

Example:

Action:	Display view:
<p>If only one desk is connected, - go to point 4.</p> <p>1. Press </p> <p>2. Press  ,  or  until the wanted desk is shown in the display.</p> <p>3. Press </p> <p>4. Press  ,  or  until the wanted user is shown in the display</p> <p>5. Press  or  until the wanted height is obtained.</p> <p>6. Press  and then  ,  or </p>	<p></p> <p>Flashing</p> <p></p> <p>Flashing</p> <p></p> <p></p>

The position is now stored in the control box.

To store a new memory position on the same desk, go through points 3 to 6 again.










If the buttons are not activated for 15 sec., the clock function will appear in the display.

Switch to a stored memory position

Quick setup:

On the back of the WDP you will find a quick guide for storing a memory position.

Example:

Action:	Display view:
<p>1. Press </p> <p>2. Press   or  until the wanted user is shown in the display</p> <p>3. Press and hold ,  or  until all desks have reached their memory position.</p> <p>The display will show the height of the moving desk for about 15. sec.</p>	<p> Flashing</p> <p></p> <p>Position I is flashing - digits counting from 117 to 88. When the desk has reached the new height position I it will stop flashing.</p>

If the buttons are not activated for 15 sec., the clock function will appear in the display.

Disposal of LINAK's products

As LINAK's customers often ask us how our products can be disposed of or scrapped we have prepared this guidance that enables a classification to different waste fractions for recycling or combustion.

Guidance

We recommend that our products be disassembled as much as possible and divided into different waste groups for recycling or combustion.

For example, waste can be sorted into metals, plastics, cable scrap, combustible material and recoverable resources.

Some of these main groups can be further divided into subgroups; e.g. metal can be divided into steel/aluminium/copper and plastic can be divided into ABS/PA/PE/PP.

As an example, the table below breaks down the different components in LINAK products to various recycling groups:

Product	Components	Recycling group
Handset/ Control :	Plastic housing Cable PCB board	Plastic recycling or combustion Cable scrap or combustion Electronics scrap

By now, almost all our casted plastic parts are supplied with an interior code for plastic type and fibre contents, if any.

Main groups of disposal

Product main groups	Metal Scrap	Cable scrap	Electronics scrap	Plastic recycling or combustion	Comments
DPXX		X	X	X	
WDPL		X	X	X	

Disposal of batteries

"Details regarding safe disposal of used and leaking batteries:

Batteries should be disposed in accordance with appropriate federal, state and local regulations. LINAK recommends that used or leaking batteries are disposed through local recycling system. Please do not throw used or leaking batteries in normal household waste or in nature. This will cause damage to the environment.

How to deal with leaking batteries

 
Leaking batteries should be disposed as described above.

If leaking batteries are discovered in the product, the batteries must be removed at once to minimise damage to the product. If leaking batteries are left in the product, it become defective.


It is recommended to use plastic gloves when handling leaking batteries. The contents of a leaking batteries can cause chemical burns and respiratory irritation.

If exposed to the contents of a leaking battery, please wash with soap and water. If irritation persists, please seek medical attention. In case of eye contact, please flush eyes thoroughly with water for 15 minutes and seek medical attention."

Label DPA

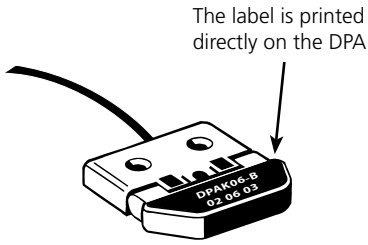

Label for DPB

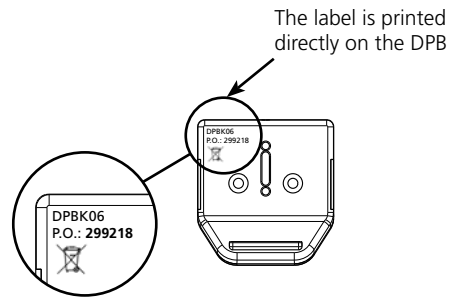 

Label for DP



Label for DPF



 
Label for DPF1C



Label for DPT




Label for WDPL

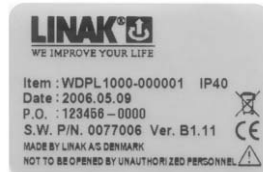


DRAWING APPENDIX

DESKLINE®

 
DPA

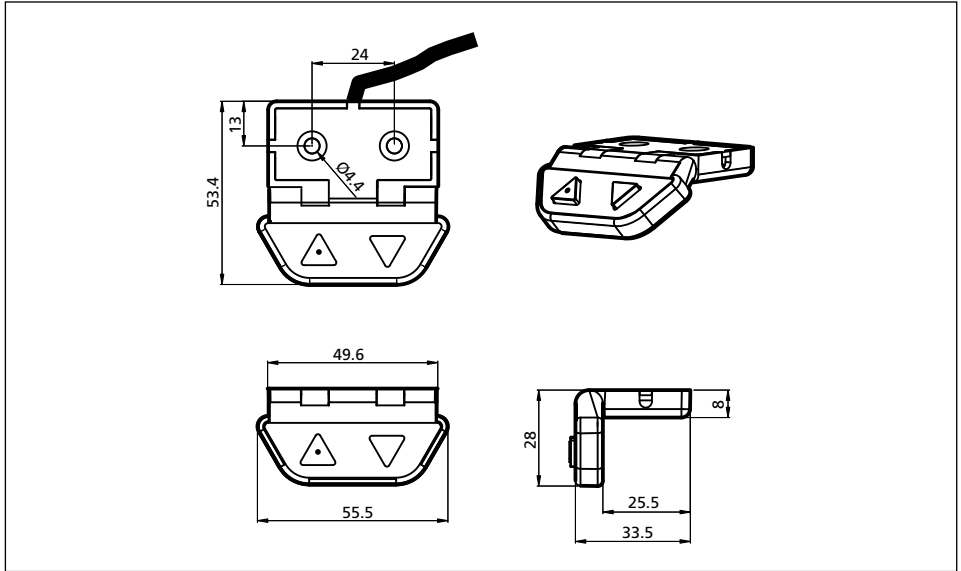


DPB with drawer

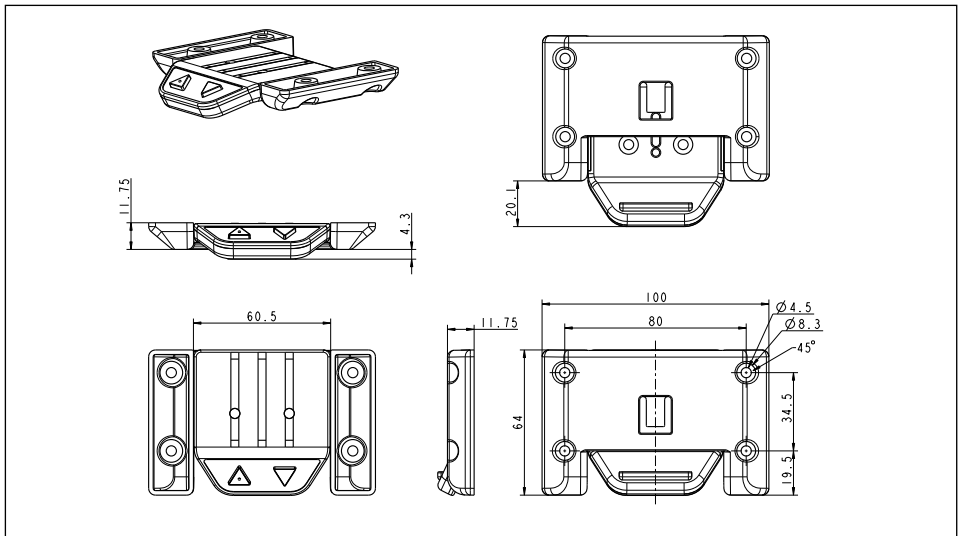 


DP1 Desk Panel

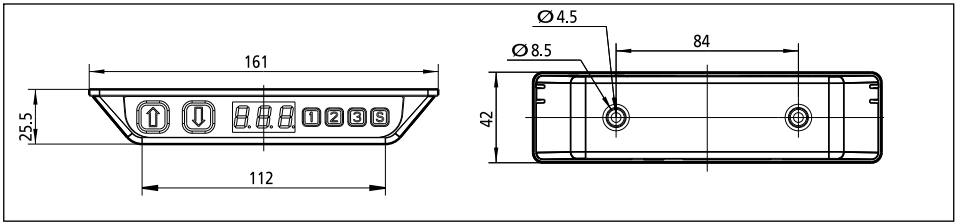 


DPF1K Desk Panel

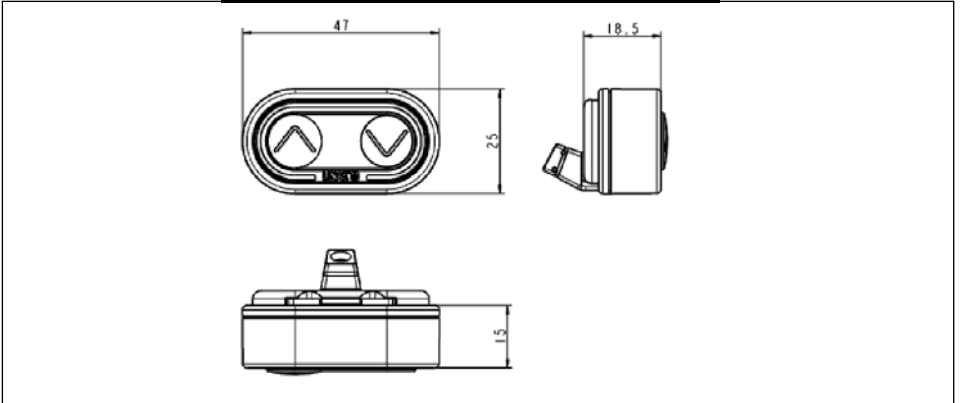 


DPF1C Desk Panel with display

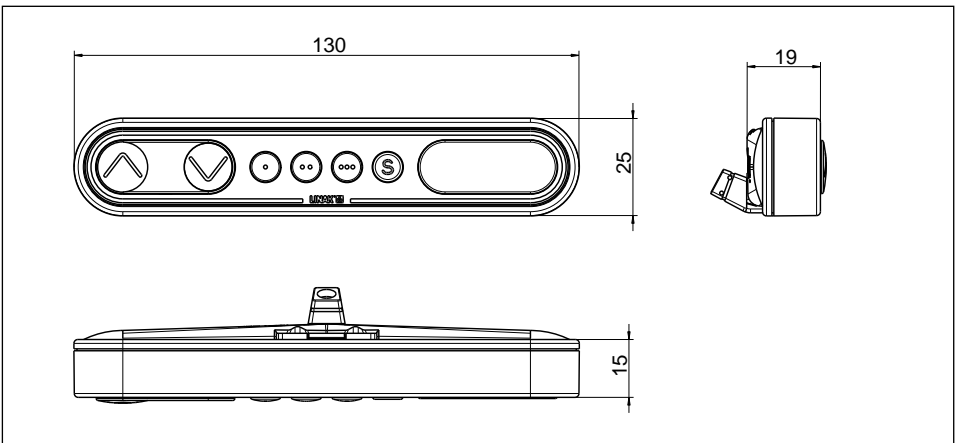 


DPF1M Desk Panel

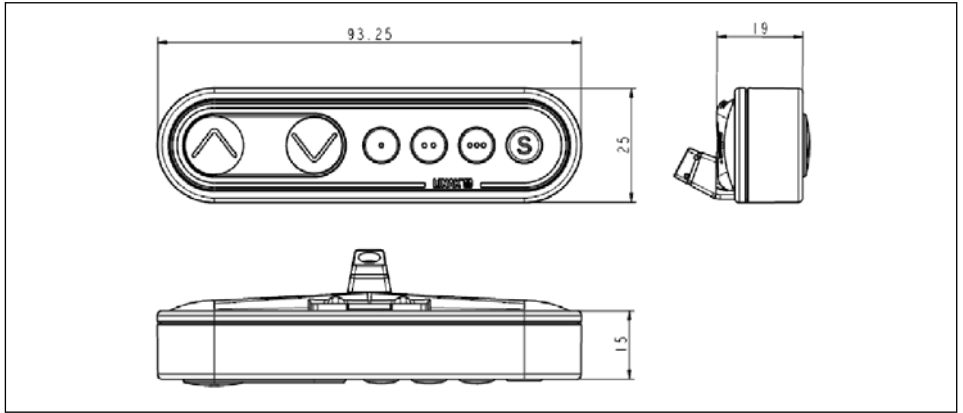 


DPT Desk Panel

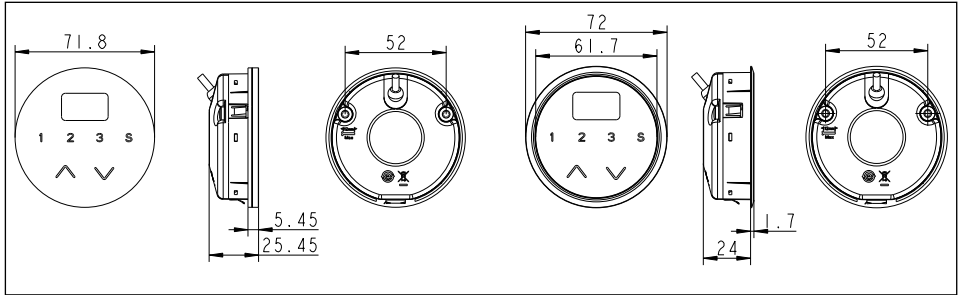 

WDP

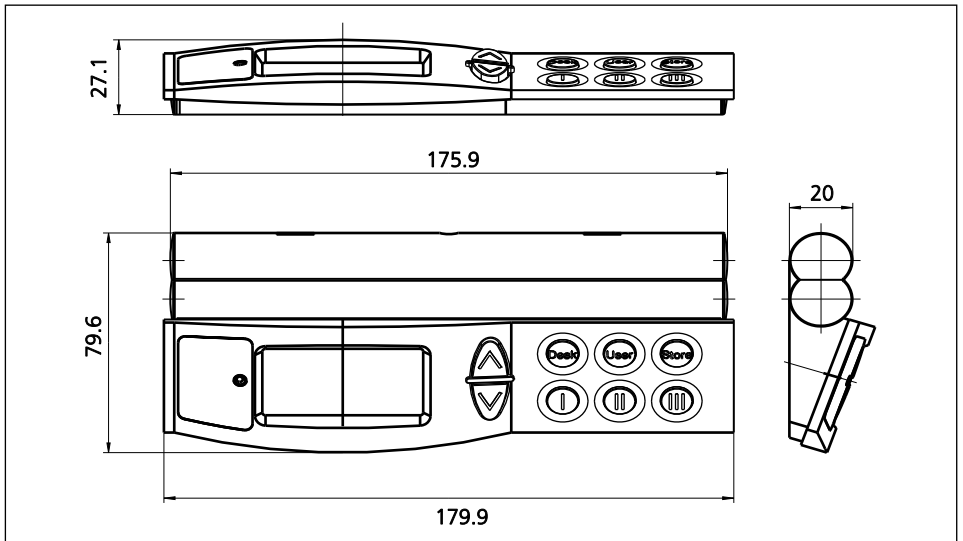 

WDP fitting for desk:

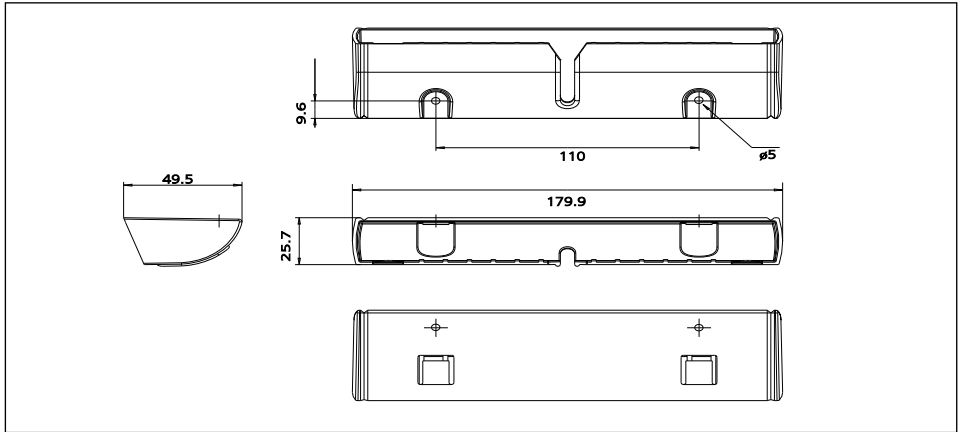 

LINAK APPLICATION POLICY

The purpose of the application policy is to define areas of responsibilities in relation to applying a LINAK product defined as hardware, software, technical advice, etc. related to an existing or new customer application.

LINAK products as defined above are applicable for a wide range of applications within the Medical, Furniture, Desk and Industry areas. Yet, LINAK cannot know all the conditions under which LINAK products will be installed, used, and operated, as each individual application is unique.

The suitability and functionality of the LINAK product and its performance under varying conditions (application, vibration, load, humidity, temperature, frequency, etc.) can only be verified by testing, and shall ultimately be the responsibility of the LINAK customer using any LINAK product.

LINAK shall be responsible solely that the LINAK products comply with the specifications set out by LINAK and it shall be the responsibility of the LINAK customer to ensure that the specific LINAK product can be used for the application in question.

DECLARATION OF CONFORMITY

LINAK A/S
Smedevænget 8
DK - 6430 Nordborg

hereby declares that LINAK Actuator System composed of:

Control Box(s) CBD4, CBD5

And

Linear Actuator(s) 31xxxH-xxxxx50S, DB4, DB5, DB6, DB7, DB9 and / or

Lifting Column(s) DL2, DL4, DL5, DL6, DL7, DL8, DL9, DL10, DL11

And

Desk Panel(s) DP1C, DP1K, DP1T, DPB, DPF, DPBK, DP1L, DP1V, DPAK, DPH1K, WDPL1,

complies with the EMC Directive: 2004/108/EC according to following standards:

EN 61000-4-2:1995+A1+A2, EN 61000-4-3:2006, EN 61000-4-4:2004,
EN 55022:1998+A2 Class B,

and complies with Low Voltage Directive 2006/95/EC according to the standard:

EN 60335-1:2002+A1+A11+A12+A2 (Household and similar electrical appliances - Safety - Part 1: General requirements)

Additional information:

The system does also comply with the standards

DS/EN 61000-6-1:2002 (Electromagnetic compatibility (EMC) - Part 6-1: Generic standards - Immunity for residential, commercial and light-industrial environments)

DS/EN 61000-6-3:2002 (Electromagnetic compatibility (EMC) - Part 6-3: Generic standards - Emission standard for residential, commercial and light-industrial environments)

Date: 2009-04-03

Signature:



(John Kling)

FACTORIES

CHINA

LINAK (Shenzhen) Actuator Systems, Ltd.
Phone: +86 755 8610 6656 · Fax: +86 755 8610 6990
E-mail: sales@linak.cn · www.linak.cn

DENMARK

LINAK A/S · Group Headquarters Guderup
Phone: +45 73 15 15 15 · Fax: +45 74 45 80 48
Fax (Sales): +45 73 15 16 13
E-mail: info@linak.com · www.linak.com

SLOVAKIA

LINAK Slovakia s.r.o.
Phone: +421 517563 414 · Fax: +421 517563 410
E-mail: jp@linak.sk · www.linak.com

USA

LINAK U.S. Inc.
North and South American Headquarters
Phone: +1 502 253 5595 · Fax: +1 502 253 5596
E-mail: info@linak-us.com · www.linak-us.com

SUBSIDIARIES

AUSTRALIA

LINAK Australia Pty. Ltd
Phone: +61 3 8796 9777 · Fax: +61 3 8796 9778
E-mail: sales@linak.com.au · www.linak.com.au

AUSTRIA

LINAK GmbH - Austria
Phone: +43 (0) 2746 210 36 · Fax: +43 (0) 2746 210 44
E-mail: sebastian.karl@linak.at · www.linak.at

BELGIUM & LUXEMBOURG

LINAK Actuator-Systems NV/SA
Phone: +32 (0)9 230 01 09 · Fax: +32 (0)9 230 88 80
E-mail: info@linak.be · www.linak.be

BRAZIL

LINAK do Brasil Comércio de Atuadores Ltda.
Phone: +55 (11) 2832-7070 · Fax: +55 (11) 2832-7060
E-mail: info@linak.com.br · www.linak.com.br

CANADA

LINAK Canada Inc.
Phone: +1 905 821 7727 · Fax: +1 905 821 4281
E-mail: info@linak.ca · www.linak.ca

CZECH REPUBLIC

LINAK C&S S.R.O.
Phone: +420581741814 · Fax: +420581702452
E-mail: ponizi@linak.cz · www.linak.cz

DENMARK

LINAK DANMARK A/S
Phone: +45 86 80 36 11 · Fax: +45 86 82 90 51
E-mail: linak@linak-silkeborg.dk · www.linak.dk

FINLAND

LINAK OY
Phone: +358 10 841 8700 · Fax: +358 10 841 8729
E-mail: linak@linak.fi · www.linak.fi

FRANCE

LINAK FRANCE S.A.R.L.
Phone: +33 (0)2 4136 3434 · Fax: +33 (0)2 4136 3500
E-mail: linak@linak.fr · www.linak.fr

GERMANY

LINAK GmbH
Phone: +49 6043 9655 0 · Fax: +49 6043 9655 60
E-mail: info@linak.de · www.linak.de

INDIA

LINAK A/S India Liaison Office
Phone: +91 120 4273708 · Fax: +91 80 2224 3863
E-mail: info@linak.in · www.linak.in

IRELAND

LINAK UK Limited
Phone: +44(0)121 544 2211 · Fax: +44(0)121 544 2552
E-mail: sales@linak.co.uk · www.linak.co.uk

ITALY

LINAK ITALIA S.r.l.
Phone: +39 02 48 46 33 66 · Fax: +39 02 48 46 82 52
E-mail: info@linak.it · www.linak.it

JAPAN

LINAK K.K.
Phone: +81 45 533 0802 · Fax: +81 45 533 0803
E-mail: linak@linak.jp · www.linak.jp

MALAYSIA

LINAK A/S Asian Representative Office
Phone: +60 4 210 6500 · Fax: +60 4 226 8901
E-mail: info@linak-asia.com · www.linak-asia.com

NETHERLANDS

LINAK Actuator-Systems B.V.
Phone: +31 76 5 42 44 40 · Fax: +31 76 5 42 61 10
E-mail: info@linak.nl · www.linak.nl

NEW ZEALAND

LINAK New Zealand Ltd.
Phone: +64 9580 2071 · Fax: +64 9580 2072
E-mail: nzsales@linak.com.au · www.linak.co.nz

NORWAY

LINAK Norge AS
Phone: +47 32 82 90 90 · Fax: +47 32 82 90 98
E-mail: info@linak.no · www.linak.no

POLAND

LINAK Polska
Phone: +48 (22) 500 28 74 · Fax: +48 (22) 500 28 75
E-mail: dkreh@linak.dk · www.linak.pl

SPAIN

LINAK Actuadores S.L.
Phone: +34 93 588 27 77 · Fax: +34 93 588 27 85
E-mail: linakact@linak.es · www.linak.es

SWEDEN

LINAK Scandinavia AB
Phone: +46 8 732 20 00 · Fax: +46 8 732 20 50
E-mail: info@linak.se · www.linak.se

SWITZERLAND

LINAK AG
Phone: +41 43 388 31 88 · Fax: +41 43 388 31 87
E-mail: info@linak.ch · www.linak.ch

TAIWAN

LINAK A/S Taiwan Representative Office
Phone: +886 2 250 80296 · Fax: +886 2 2508 3604
E-mail: info@linak.com.tw · www.linak.com.tw

TURKEY

LINAK A/S Turkey Representative Office
Phone: +90 312 4726338-59 · Fax: +90 312 4726635
E-mail: vozen@linak.com.tr · www.linak.com.tr

UNITED KINGDOM

LINAK UK Limited
Phone: +44(0)121 544 2211 · Fax: +44(0)121 544 2552
E-mail: sales@linak.co.uk · www.linak.co.uk

DISTRIBUTORS

ARGENTINA

NOVOTEC ARGENTINA SRL
Phone: +[54] (11) 4303-8900/89 · Fax: +[54] (11) 4032-0184
E-mail: info@novotecargentina.com
www.novotecargentina.com

COLOMBIA

MEM Ltda
Phone: +[57] (1) 334-7666 · Fax: +[57] (1) 282-1684
E-mail: servicioalcliente@mem Ltda.com.co
www.mem Ltda.com.co

INDONESIA

PT. HIMALAYA EVEREST JAYA
Phone: +6 221 544 8956/65 · Fax: +6 221 619 4658/1925
E-mail: hejplastic-div@centrin.net.id

IRAN

Bod Inc.
Phone: +98 21 2203 9435 · Fax: +98 21 2203 9430
E-mail: info@bod.ir · www.bod.ir

MEXICO

ILSA S.A. de C.V.
Phone: +[52] (55) 5388-3960 · Fax: +[52] (55) 5388-3966
E-mail: linak@ilsamexico.com · www.ilsamexico.com

RUSSIAN FEDERATION

000 FAM
Phone: +7 812 3319333 · Fax: +7 812 3271454
E-mail: purchase@fam-drive.ru · www.fam-drive.ru

SINGAPORE

SERVO DYNAMICS PTE. Ltd.
Phone: +65 6844 0288 · Fax: +65 6844 0070
E-mail: servodynamics@servo.com.sg · www.servo.com.sg

SOUTH AFRICA

Industrial Specialised Applications CC
Phone: +27 11 312 2292 or +27 11 2077600
Fax: +27 11 315 6999
E-mail: garth@isagroup.co.za · www.isaza.co.za

SOUTH KOREA

UNITEK ENG.
Phone: +82 2 567 0888 · Fax: +82 2 3453 1177
E-mail: unitekeng@unitekeng.co.kr · www.unitekeng.co.kr

UNITED ARAB EMIRATES

Mechtronics
Phone: +971 4 267 4311 · Fax: +971 4 267 4312
E-mail: mechtron@emirates.net.ae
www.mechtronics.ae

For contact details on other countries please visit
www.linak.com or contact:

LINAK INTERNATIONAL

Fax: +45 74 45 90 10
E-mail: info@linak.com · www.linak.com

Terms of use

The user is responsible for determining the suitability of LINAK products for specific application. LINAK takes great care in providing accurate and up-to-date information on its products.

However, due to continuous development in order to improve its products, LINAK products are subject to frequent modifications and changes without prior notice. Therefore, LINAK cannot guarantee the correct and actual status of said information on its products.

While LINAK uses its best efforts to fulfil orders, LINAK cannot, for the same reasons as mentioned above, guarantee the availability of any particular product. Therefore, LINAK reserves the right to discontinue the sale of any product displayed on its website or listed in its catalogues or other written material drawn up by LINAK.

All sales are subject to the Standard Terms of Sale and Delivery for LINAK. For a copy hereof, please contact LINAK.



WE IMPROVE YOUR LIFE